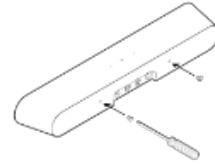


**5**


Using a Phillips head screwdriver, fasten the 2 attachment screws to the back of the soundbar, making sure they are fully tightened.

**6**

Remove the protective cap from the optical cable, then connect the power and optical cables to the back of the soundbar.

**7**

Slide the soundbar down so the attachment screws fit into the slots on the wall bracket. Make sure the touch controls are facing up and Sonos Ray is fully seated.

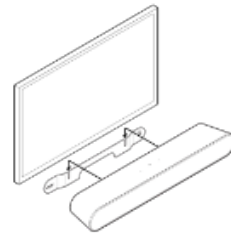

## Specifications

Feature	Description
AUDIO	
Amplifiers	Four Class-D digital amplifiers.
Woofers	Two full-range woofers ensure you'll hear the faithful playback of mid-range vocal frequencies plus deep, rich bass.
Tweeters	Two tweeters create a crisp and clear high-frequency response.
Audio ports	Two micro ports with proprietary anti-distortion technology.

---

**Adjustable EQ**

Use the Sonos app to adjust bass, treble, and loudness.

---

**SOFTWARE**

---

**Sonos S2**

Set up and control with the latest generation of the Sonos app.

---

**Apple AirPlay 2**

Works with AirPlay 2 on apples devices iOS 11.4 and higher.

---

**Trueplay**

Dynamically tunes the speaker to the unique acoustics of the room or area (iOS device required).

---

**Speech enhancement**

Turn on this home theater setting in the Sonos app to make TV dialogue even clearer.

---

**Night sound**

Turn on this home theater setting to reduce the intensity of loud TV sound effects.

---

**System requirements**

TV with optical digital audio output, broadband internet, and the Sonos app.

---

**GENERAL**

---

**Dimensions (H x W x D)**

2.79 x 22.00 x 3.74 in (71 x 559 x 95mm)

---

**Colors**

Black, white

---

**Finish**

Matte

---

**Weight**

4.29 lb (1.95 kg)

---

**Speaker status light**

Displays the speaker's connection to WiFi, indicates when the volume is muted, and signals errors.

---

**Operating temperature**

32°F to 104° F (0° C to 40° C)

---

**Storage temperature**

-4°F to 122° F (-20° C to 50° C)

---

**Control**

Use your IR (infrared-enabled) TV remote control, touch controls or the Sonos app.

---

**CPU**

Quad Core; 1.4 GHz A-53

**Memory**

1 GB SDRAM; 4GB NV

**Mounting**

M5 threaded mounting socket

**POWER & CONNECTIVITY****Power supply**

Auto-switching 100-240 V, 50-60 Hz 2.0A AC universal input.

**WiFi**

Connects to WiFi network with any 802.11b/g/n, 2.4 GHz broadcast-capable router. 802.11n only network configurations are not supported—you can either change the router settings to 802.11 b/g/n or connect a Sonos product to your router.

**Optical**

Use the included optical cable to connect the soundbar to your TV's optical digital audio output.

**Ethernet**

One port for hardwiring to your router (optional).

**Infrared receiver**

Syncs with your TV remote for streamlined control.

**Supported devices**

Connects to TV with optical cable. Plays sources connected to the TV, including cable boxes and game consoles.

- Specifications subject to change without notice.

## Important safety information

1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Clean only with dry soft cloth. Household cleaners or solvents can damage the finish on your Sonos products.
7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus that produce heat.

9. Protect the power cable from being walked on or pinched, particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
10. Only use attachments/accessories specified by the manufacturer.
11. Unplug this apparatus during lightning storms or when unused for long periods of time.
12. This product does not have any user-serviceable parts. Do not open or disassemble or attempt to repair it or replace any components. Refer all servicing to Sonos qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cable or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
13. The Mains plug should be readily available to disconnect the equipment.
14. **Warning:** To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture.
15. Do not expose apparatus to dripping or splashing and do not place objects filled with liquids, such as vases, on the apparatus.